


KT-LCD5 e-Bike Display User Manual

v1.0

Dear customer, please read this manual before you use KT-LCD5 instrument. The manual will guide you use the instrument correctly to achieve a variety of vehicle control and vehicle status displays.

Functions and Display

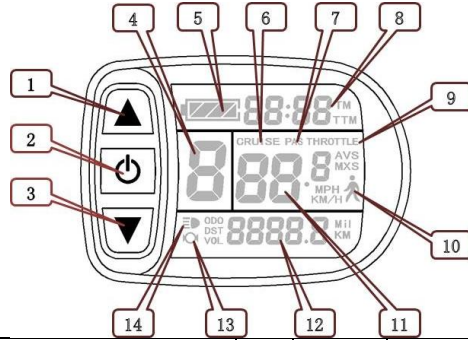

1		UP button	11	Km/H	Riding speed(metric)
2		SW button		MPH	Riding speed (imperial)
3		DOWN button		MXS	MAX speed
4	ASSIST	Pas level		AVS	Average speed
5		Battery capacity indicator	12	Km	Distance(metric)
6	CRUISE	Cruise function		Mi l	Distance (imperial)
7	PAS	Power-assisted function		DST	Trip distance
8	TM	Single trip time		ODO	Total distance
	TTM	Total trip time		VOL	Battery voltage
9	THROTTLE	Throttle display	13		The brake display
10		6Km/H push power assist	14		Backlight and headlights

Operation

1. ON/OFF


Hold button long to turn on the power, and hold button long for a second time to turn off the power. When the motor stops driving and when the e-bike is not used for a consecutive 5 minutes, it will automatically shut down and turn off the motor power supply.

2. Display 1




Hold button to start up and enter display 1.

2.1 Turn on backlight and headlights

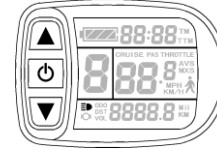

Hold button long to turn on backlight and headlights (the controller should have headlight drive output function); hold button long again to turn off the backlight and headlights.

2.2 Assist ratio gear (ASSIST) switch

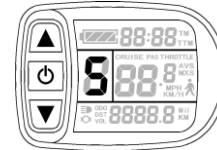


Hold or button shortly to switch 1-5 file gear. Gear 1 is for the minimum power, gear 5 is for the highest power. Each startup will automatically restore the gear shutdown last time(the user can set randomly). Gear 0 is without booster function.

2.3 6KM/H assist promotion function




Hold button and flashes, the vehicle drives at the speed not more than 6Km /h. Release button, the function is invalid.

2.4 THROTTLE display

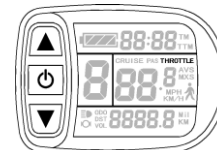


Turn on throttle, THROTTLE display.

2.5 PAS display

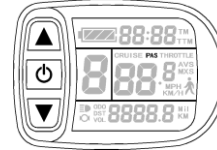

When Power-assisted riding, PAS display.

2.6 Cruise function

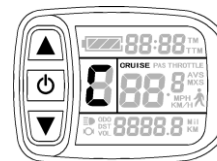

After the cruise function is turned on, the trip riding speed is greater than 7 km/ h, hold button long and enter cruise, the CRUISE lit. Brake or hold any button to cancel.

2.7 Display and delete of single Data



After power on for 5 seconds, hold ▲ and ▼ button at the same time, single trip riding time (TM) and single trip distance (DST) flash, hold ⏻ button shortly, the content of both is cleared. If failed holding the button within 5 seconds, it will automatically return the display interface after 5 seconds, original content is preserved.

3. Display 2



Hold ⏻ button shortly in display 1 to enter display 2. In the riding mode after 5 seconds, display 2 automatically returns to display 1.

4. Display 3



Hold ⏻ button shortly in display 2 to enter display 3. In the riding condition, five seconds later, a single maximum speed (MXS) display automatically returns to the real riding speed (KM/H).


5. In display 3, hold ⏻ button shortly (SW), and the display will re-enter display 1.

6. Hold ⏻ button to turn off the display and the power supply of controller.

7. Automatically prompt interface

7.1 Error Code Display

Error Code	Definition
01_info	Throttle Abnormality
03_info	Motor hall signal Abnormality
04_info	Torque sensor signal Abnormality
05_info	Axis speed sensor Abnormality(only applied to torque sensor)
06_info	Motor or controller has short circuit Abnormality

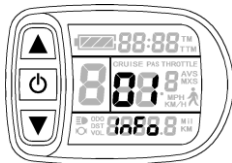

Electronic control system failure will display (flashing) fault code. Once the fault was removed, it automatically exits from the fault code display interface.

General Project Setting

1. Set maximum riding speed




After power on for 5 seconds, hold ▲ and ▼ button at the same time, maximum riding speed KM/H and MXS flash, hold ▲ or ▼ button shortly to set the maximum riding speed (default 25KM/H). Hold ⏻ button shortly and go to the next parameter settings.

2. Wheel diameter setting



The wheel diameter will be set after finishing setting the maximum riding speed, wheel diameter specifications flashes. Hold ▲ or ▼ button shortly to set the specifications of wheel diameter. Select the range 6,8,10,12, 14,16,18,20,22, 24,26,700c and 28 inches. Hold ⏻ button shortly and go to the next parameter settings.

3. Set the metric units

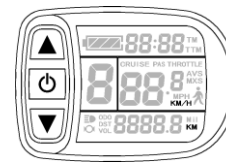

The metric units will be set after finishing setting wheel diameter, KM/H and Km flash. Hold ▲ or ▼ button shortly and select metric units of speed and mileage in synchronization.

Display	Metric	Imperial
Riding speed	KM/H	MPH
Total distance	Km	Mil

4. KM/H and Km stop flash after metric unit setting is completed. Hold ⏻ button shortly again to re-enter the maximum riding speed setting interface; or hold ⏻ button long to exit from setting environment of routine projects and save the setting values, returning to display 1.


5. Exit from routine project setting

All three routine project settings can exit from the setting environment and return to the display if hold ⏻ button long after each setting is completed, meanwhile the setting values are saved.

Under each setting interface, if the button failed holding for more than 1 minute, it will automatically return to display 1, and the setting value is invalid.

Outline Drawings and Dimensions

1. Dimensions of main instrument body

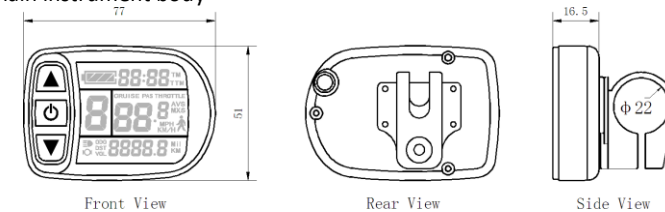

2. Wiring diagram

